

before the lamp is disposed of. removed from the lamp and disposed of safely lamp is non-replaceable. The battery must be it with the supplied USB cable. The battery in this battery life, it is recommended to regularly charge maintain a capacity of 75% or more. To extend EN 61347-2-13. After 300 charging cycles, it will current not more than 2A, according to IEC/ (SELV) output with a constant voltage of 5V, input use a USB power source/driver with low voltage lithiumion battery. When charging the battery,

the lamp is not kept outside while raining. indoor and outdoor use. HAY recommends that replaced immediately. This lamp is designed for USB charging cable is damaged it should be order to avoid an electrical hazard. If the external exclusively replaced by a qualified electrician in light source contained in this luminaire should be that have been modified or tampered with. The HAY accepts no responsibility for any products The product must not be modified in any way.

This lamp has an integrated high-performance

## NOITNETTA

- Max. discharge current: 700mA.
- · Max. charging current: 800mA.
- · Max. charge voltage of battery: 5.8V

COLOUR TEMPERATURE | 2800K. Warm White. POWER (W) | 3.7 W FITTING TYPE | Integrated LED

whole luminaire should be replaced. When the light source reaches its end of life, the 50,000 hours. The expected lifespan of the LED module is module (2800K warm white, 110 lumens) This product is supplied with an integrated LED

**TECHNICAL DATA** 

cause undesired operation.

- received, including interference that may This device must accept any interference
- interference.
  - This device may not cause harmful

the following two conditions: part 15 of the FCC Rules. Operation is subject to operate the equipment. This device complies with for compliance could void the user's authority to not expressly approved by the party responsible

CAUTION | Changes or modifications to this unit

radio/TV technician for help.


- Consult the dealer or an experienced connected to.
- different circuit to the one the receiver is
- Connect the equipment to an outlet on a equipment and receiver.
  - Increase the distance between the
- · Reorient or relocate the receiving antenna.

of the following measures: to try to correct the interference by one or more the equipment off and on, the user is encouraged reception, which can be determined by turning cause harmful interference to radio or television particular installation. If this equipment does guarantee that interference will not occur in a to radio communications. However, there is no instructions, may cause harmful interference installed and used in accordance with the radiate radio frequency energy and, if not This equipment generates, uses and can interference in a residential installation. provide reasonable protection against harmful FCC Rules. These limits are designed to B digital device, pursuant to part 15 of the found to comply with the limits for a Class NOTE | This equipment has been tested and

read all instructions before installing the lamp. lamp is not plugged into a power source. Please Before removing the battery, make sure that the

- GENERAL INFORMATION -

## **MOUSQUETON**

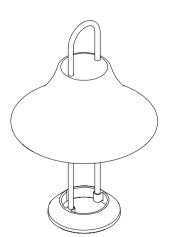

DESIGN BY INGA SEMPÉ

been turned OFF before cleaning the product. rough sponges. Ensure that the power supply has to clean the product and avoid using abrasive or cloth. Do not use alcohol or any other solvents cloth and mild detergent, or a dry microfibre The product can be cleaned with a soft damp

CARE AND MAINTENANCE

- · Do not submerge.
- $\cdot$  Suitable for damp and wet locations.

.WOOTLS 10, WOTLS, WTLS, WOOLS, WOLS STOW, STOOM, SJEW, SJEOW, SJEOOW, SJW, type SEW, SEOW, SEOOW, SOW, STW, use, such as an extension cord of cord

- Use only with an extension cord for outdoor
- and are able to be used for this measure of available having built-in GFCI protection portable luminaire. Receptacles are or outlet(s) to be used for the wet location protection is to be provided on the circuit(s)
- Ground Fault Circuit Interrupter (GFCI) appliance's plug. and grounding receptacles that accept the
- that have three-prong grounding plugs · Use only three-wire outdoor extension cords

shock and personal injury, including the following: be followed to reduce the risk of fire, electric luminaires, basic safety precautions should always WARNING | When using outdoor use portable

- CARE & MAINTENANCE -

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your lighting.



Please find our Care & Maintenance guide by scanning the QR code



You can find more relevant information on Mousqueton by scanning the QR code

You can also find the same information here hay.dk/downloads

> Havnen 1 8700 Horsens Denmark +45 4282 0282 / hay@hay.com


> > www.hay.com





To charge the battery, insert the USB charger into the USB port on the bottom of the lampshade and connect the cable to a power supply. When the battery is charging, the light on the bottom will show red. When the battery is fully charged, the light will show green. The lamp can be used while charging, however this will extend the required charging time

To turn the lamp on, touch the round button on the bottom of the lampshade. The lamp has a three-step dimmable feature. First push sets it to maximum brightness, second push to medium brightness and the third push to lowest brightness. Fourth push turns the lamp off.

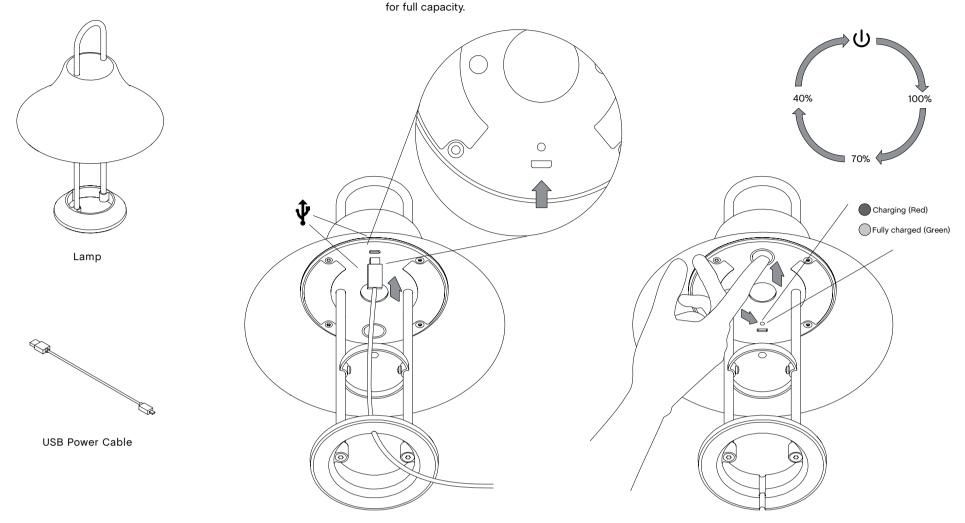

3.


The carabiner handle can be opened and closed by lifting the

carabiner up and twisting it gently 180 degrees.

Suggestions for use

The carabiner can be used to hang the lamp, to create a cosy The Mousqueton Portable Lamp can also be balanced atmosphere in your garden, as shown below.

Suggestions for use

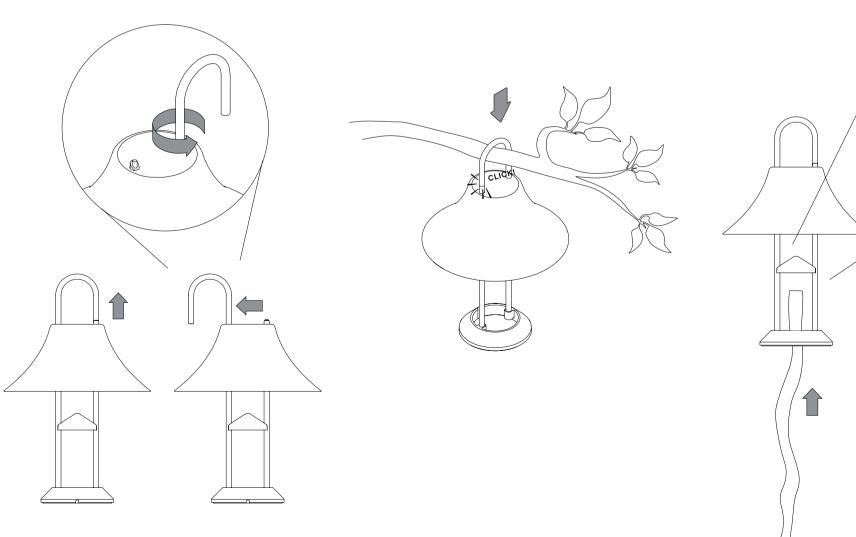

on a stick as shown below..